


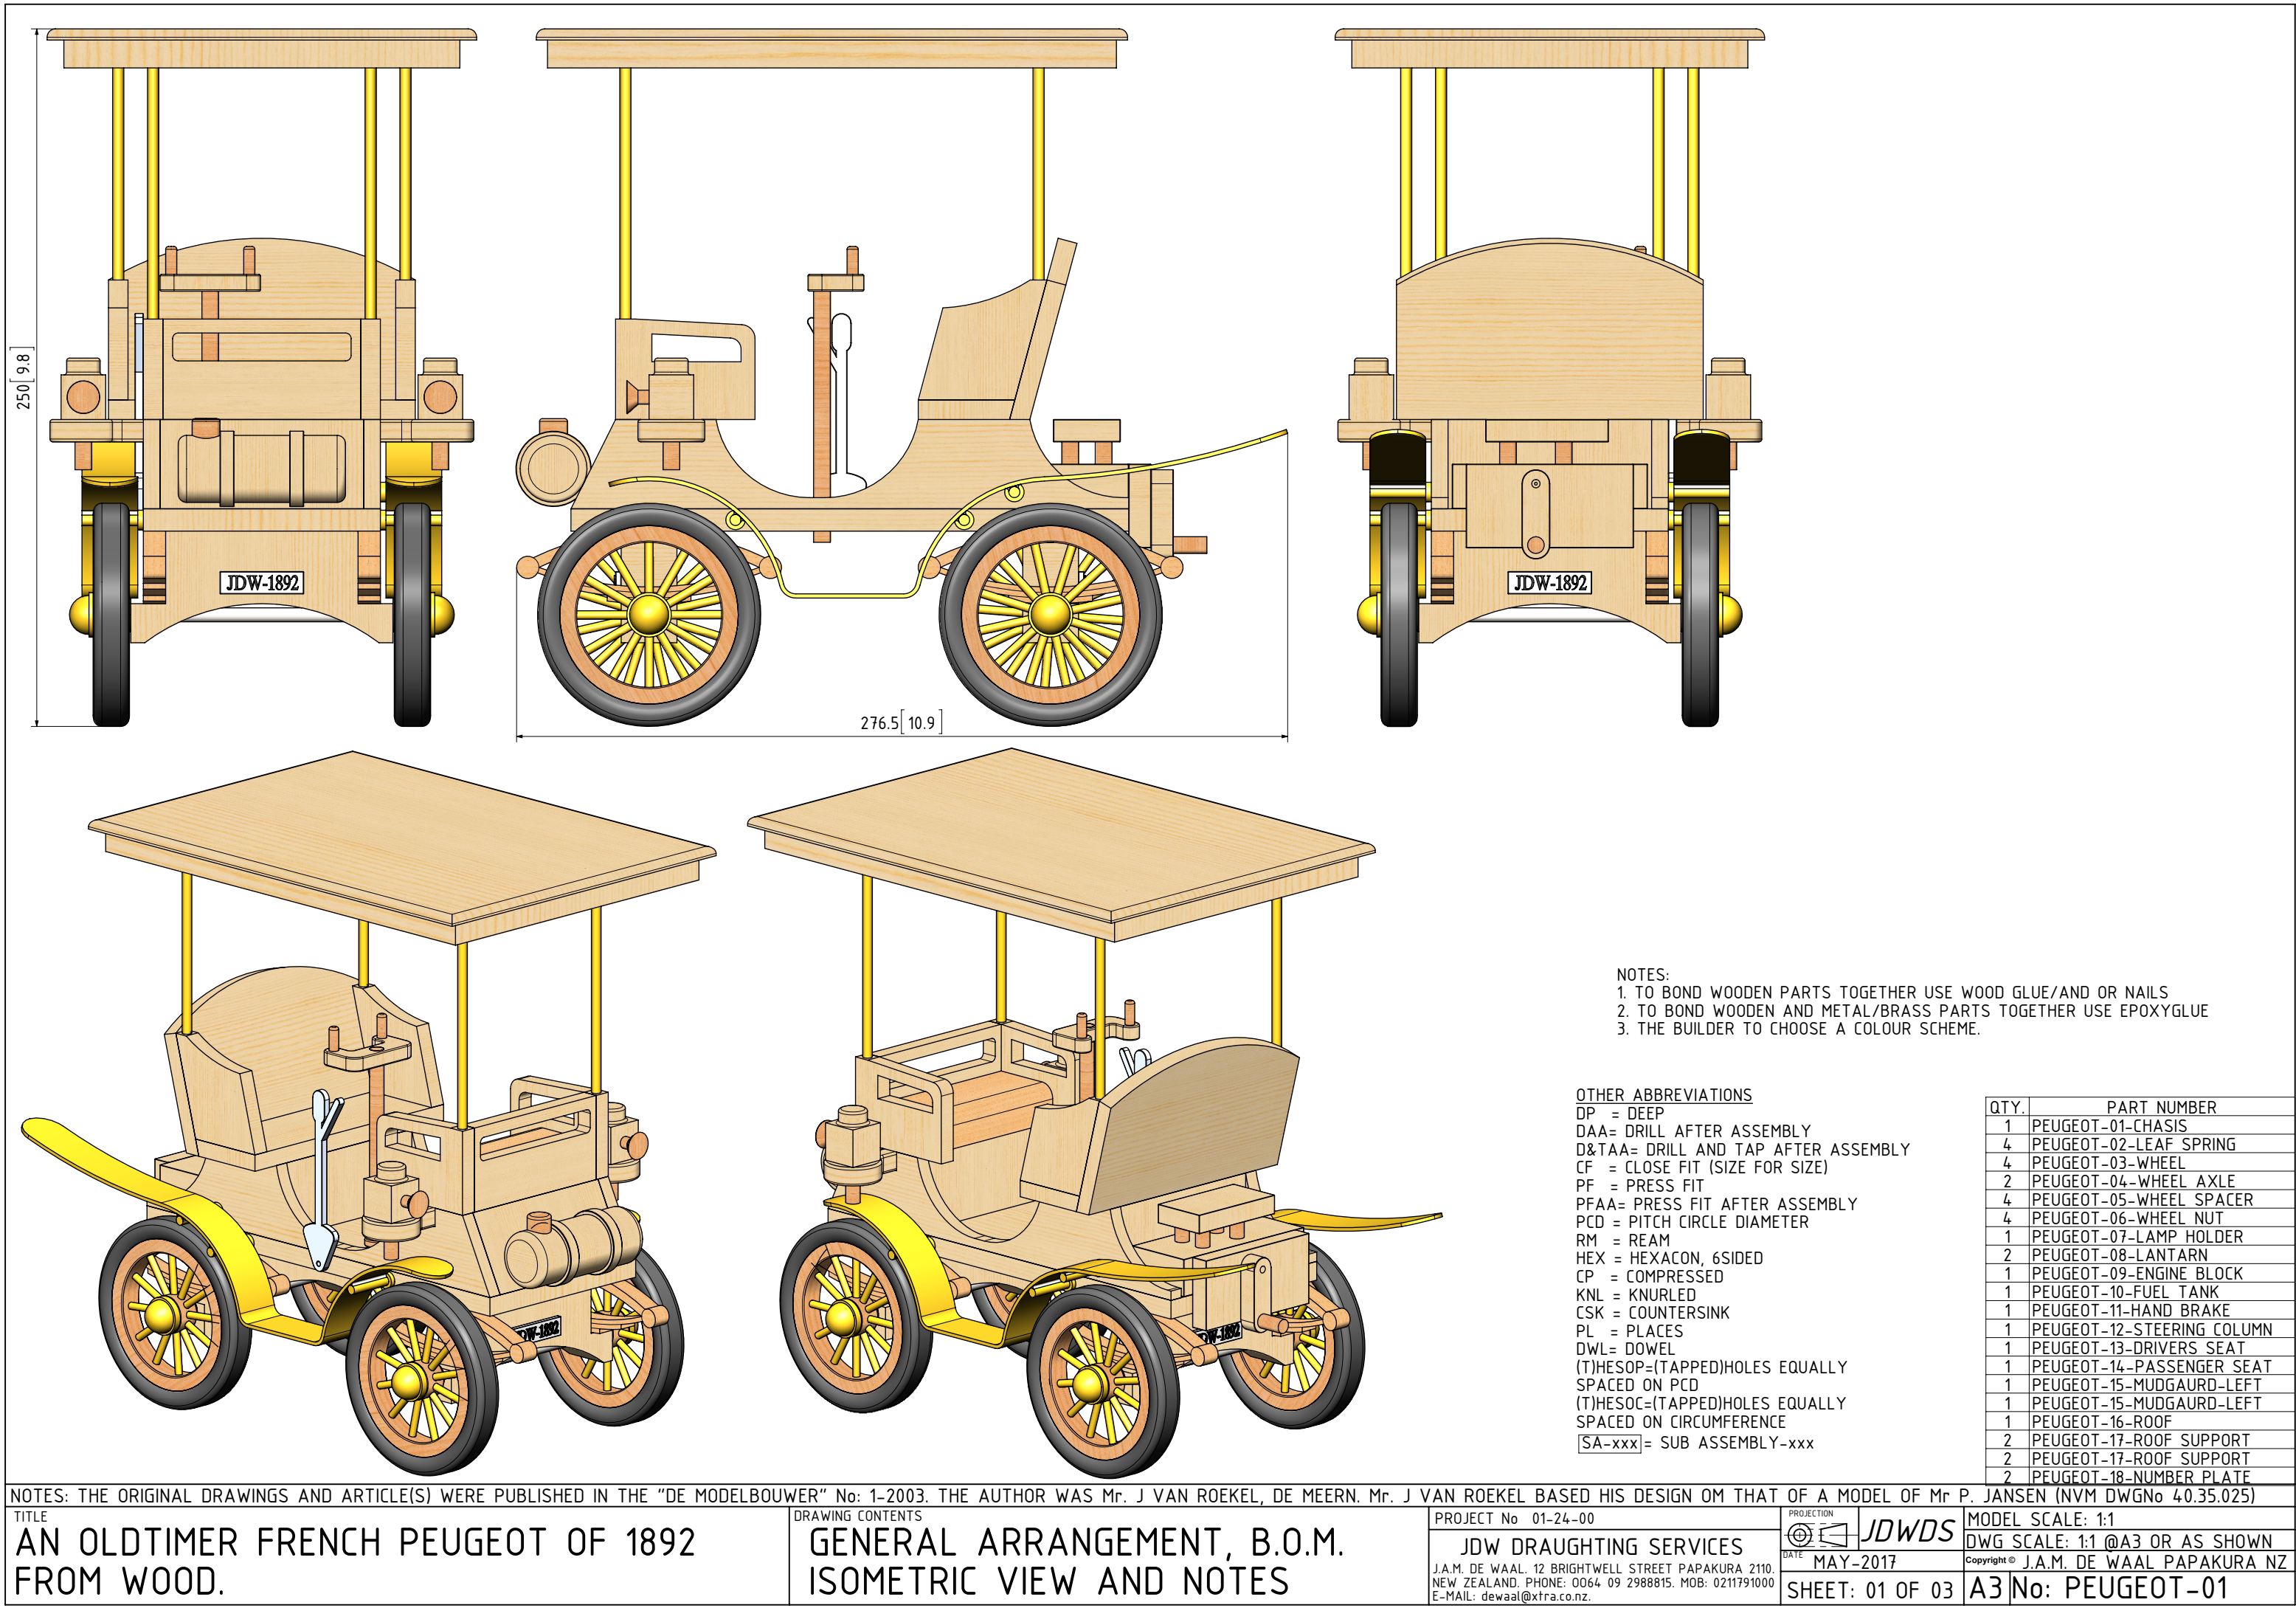

NOTES:
1. TO BOND WOODEN PARTS TOGETHER USE WOOD GLUE/AND OR NAILS
2. TO BOND WOODEN AND METAL/BRASS PARTS TOGETHER USE EPOXYGLUE
3. THE BUILDER TO CHOOSE A COLOUR SCHEME.

OTHER ABBREVIATIONS
DP = DEEP
DAA= DRILL AFTER ASSEMBLY
D&TAA= DRILL AND TAP AFTER ASSEMBLY
CF = CLOSE FIT (SIZE FOR SIZE)
PF = PRESS FIT
PFAA= PRESS FIT AFTER ASSEMBLY
PCD = PITCH CIRCLE DIAMETER
RM = REAM
HEX = HEXACON, 6SIDED
CP = COMPRESSED
KNL = KNURLED
CSK = COUNTERSINK
PL = PLACES
DWL= DOWEL
(T)HESOP=(TAPPED)HOLES EQUALLY SPACED ON PCD
(T)HESOC=(TAPPED)HOLES EQUALLY SPACED ON CIRCUMFERENCE
[SA-xxx]= SUB ASSEMBLY-xxx

QTY.	PART NUMBER
1	PEUGEOT-01-CHASIS
4	PEUGEOT-02-LEAF SPRING
4	PEUGEOT-03-WHEEL
2	PEUGEOT-04-WHEEL AXLE
4	PEUGEOT-05-WHEEL SPACER
4	PEUGEOT-06-WHEEL NUT
1	PEUGEOT-07-LAMP HOLDER
2	PEUGEOT-08-LANTARN
1	PEUGEOT-09-ENGINE BLOCK
1	PEUGEOT-10-FUEL TANK
1	PEUGEOT-11-HAND BRAKE
1	PEUGEOT-12-STEERING COLUMN
1	PEUGEOT-13-DRIVERS SEAT
1	PEUGEOT-14-PASSENGER SEAT
1	PEUGEOT-15-MUDGAURD-LEFT
1	PEUGEOT-15-MUDGAURD-LEFT
1	PEUGEOT-16-ROOF
2	PEUGEOT-17-ROOF SUPPORT
2	PEUGEOT-17-ROOF SUPPORT
2	PEUGEOT-18-NUMBER PLATE