


QTY. PART NUMBER		QTY. PART NUMBER		QTY. PART NUMBER	
1	DCV-101-STEAM AXHAUST SPACER	2	DCV-212-CROSSHEAD SLIDING BAR	1	DCV-414-CABIN CENTER FLOOR BEAM
1	DCV-101A-STEAM EXHAUST PIPE	2	DCV-213-CROSSHEAD CON ROD SHAFT	1	DCV-417-CABIN LOWER FLOOR SIDE + REAR ANGLE
7	DCV-102-MAIN FRAME SPACER	2	DCV-214-VALVE	1	DCV-421-CABIN UPPER FLOOR LH-SIDE + FRONT ANGLE
2	DCV-104A-SPACER	2	DCV-215-VALVE ROD	1	DCV-422-CABIN UPPER FLOOR RH-SIDE + FRONT ANGLE
4	DCV-105A-AXLE BOX STOP BLOCK	2	DCV-216-VALVE NUT	2	DCV-423-CABIN UNDER FLOOR ANGLE
4	DCV-105B-AXLE BOX STOP BLOCK SPRING HOLDER	2	DCV-217-VALVEROD CONNECTOR	1	DCV-425-CABIN REAR FRAME PLATE RH ANGLE
4	DCV-105C-SPRING STEM	2	DCV-218-VALVE ROD CONNECTOR PIN	1	DCV-426-CABIN REAR FRAME PLATE LH ANGLE
4	DCV-105D-SPRING	2	DCV-220-CYLINDER REAR COVER	2	DCV-501-WATER TANK
4	DCV-105E-SPRING TENSIONER SCREW	2	DCV-221-CYLINDER FRONT COVER	4	DCV-501A-WATER TANK ENDS
1	DCV-106-WATER PUMP LEVER SPACER BLOCK	2	DCV-222-CYLINDER REAR COVER SEALING GLAND	2	DCV-502-WATER TANK DRAIN
1	DCV-107-WATER PUMP LEVER STAND	2	DCV-222A-CYLINDER REAR COVER SEAL	2	DCV-503-WATER TANK LID
4	DCV-110-AXLE BOX	1	DCV-302-BOILER SMOKE STACK	4	DCV-504-WATER TANK SUPPORT ANGLE
2	DCV-111-MAIN AXLE	1	DCV-303-BOILER PRESSURE DOME TOP	2	DCV-505-WATER TANK CONNECTION HOSE
2	DCV-112-CON ROD STUB AXLE-1	1	DCV-304-BOILER WATER SUPPLY NOZZLE	1	DCV-601-BURNER
2	DCV-113A-CON ROD AXLE-2 CAP SCREW	3	DCV-305-BOILER PLUG TYPE-1(6.5)	1	DCV-602-BURNER PAN
2	DCV-113B-CON ROD STUB AXLE-2	2	DCV-307-STEAM INLET FLANGE	1	DCV-603-BURNER PAN LID
2	DCV-114A-FRONT WHEEL	1	DCV-308-BOILER STEAM CONTROL DOME BASE	1	DCV-604-BURNER CONNECTOR NOZZLE
2	DCV-114B-REAR WHEEL	1	DCV-309-BOILER BRACKET B LOCK	1	DCV-LGB RAIL
2	DCV-115-REAR WHEEL ECCENTRIC	1	DCV-310-BOILER	2	DCV-M2 NUT
2	DCV-116-ANGLE BRACKET	1	DCV-311-BOILER PRESSURE DOME MANTEL	16	DCV-M2.5 NUT
1	DCV-117-WATER PUMP ECCENTRIC	1	DCV-312-BOILER REAR PLATE	8	DCV-M2.5x5 COUNTERSINK SCREW
1	DCV-118-WATER PUMP ECCENTRIC COVER	1	DCV-313-BOILER SMOKE BOX END PLATE	36	DCV-M2.5x5 CYLINDERHEAD SCREW
1	DCV-119A-WATER PUMP YOKE	1	DCV-314-BOILER FIRE BOX END PLATE-1	78	DCV-M2x4 R-HEAD SCREW
1	DCV-119B-M4 THREADED ROD	1	DCV-315-BOILER FIRE BOX END PLATE-2	6	DCV-M2x5 COUNTERSINK SCREW
1	DCV-120-WATER PUMP MAIN LEVER	2	DCV-316-BOILER FIRE BOX WATER TUBE	4	DCV-M2x5 CYLINDERHEAD SCREW
1	DCV-121-WATER PUMP ADJUSTER	2	DCV-317-BOILER FIRE BOX HOT GAS EXHAUST TUBE	47	DCV-M3 NUT
2	DCV-122-REVERSING SLIDING BLOCK	1	DCV-318-BOILER FIRE BOX COVER PLATE	11	DCV-M3-WASHER
1	DCV-122A-WATER PUMP YOKE PIN	1	DCV-320-BOILER CYLINDER STEAM INLET TUBE-1A	4	DCV-M3x12 CYLINDERHEAD SCREW
1	DCV-123A-WATER PUMP MAIN LEVER SHAFT	1	DCV-322-BOILER STEAM CONTROL DOME MANTEL	4	DCV-M3x15 CYLINDERHEAD SCREW
1	DCV-123B-WATER PUMP MAIN LEVER SHAFT SPACER	1	DCV-323-BOILER STEAM VALVE CONTROL PLATE	18	DCV-M3x18 CYLINDERHEAD SCREW
1	DCV-124-RIGHT HAND FRAME	1	DCV-324-BOILER STEAM CONTROL INNER DOME	3	DCV-M3x4 GRUB SCREW
1	DCV-125-LEFT HAND FRAME	1	DCV-325-BOILER STEAM THROTTLE VALVE	20	DCV-M3x5 CYLINDERHEAD SCREW
1	DCV-126-FRONT BUFFER PLATE	1	DCV-326-BOILER STEAM THROTTLE VALVE OPERATOR SPINDLE	20	DCV-M3x6 COUNTERSINK SCREW
1	DCV-127-REAR BUFFER PLATE	2	DCV-327-BOILER STEAM SAFETY VALVE	3	DCV-M3x6.5 COUNTERSINK SCREW
1	DCV-128-FRAME SPACER PLATE	2	DCV-327A-BOILER SAFETY VALVE SPRING	89	DCV-M3x8 CYLINDERHEAD SCREW
2	DCV-129-BUFFER BRACKET	4	DCV-327B-BOILER STEAM SAFETY VALVE SUPPORT PILLAR	3	DCV-M4x40 CYLINDERHEAD SCREW
2	DCV-130-BUFFER	1	DCV-329-BOILER FRONT SADDLE		
2	DCV-131-BUFFER STEM	1	DCV-330-BOILER WATER INJECTOR PUMP FLANGE		
4	DCV-132-KEEPER	2	DCV-331-BOILER WATER INJECTOR PUMP SUPPLY SCREW		
2	DCV-133-COUPLING ROD	1	DCV-332-BOILER WATER INJECTOR PUMP PISTON CONNECTOR		
2	DCV-134-CON ROD	1	DCV-333-BOILER WATER INJECTOR PUMP BODY EXTENSION		
2	DCV-135-CON ROD LINK	1	DCV-334-BOILER SMOKE BOX FRONT DOOR		
2	DCV-136-VALVE GEAR PLATE	1	DCV-335-SMOKE BOX DOOR HINGE SYSTEM		
2	DCV-137-VALVE ROD LINK-1	1	DCV-336-BOILER WATER INJECTOR PUMP PISTON		
2	DCV-138A-ROCKER ARM-1	1	DCV-337-BOILER WATER INJECTOR PUMP BODY		
2	DCV-138B-ROCKER ARM-2	1	DCV-338-BOILER BRACKET PLATE		
2	DCV-139-VALVE ROD CENTER LINK	1	DCV-339-BOILER SMOKE BOX FRONT PLATE		
2	DCV-140-VALVE ROD LINK-2	1	DCV-340-BOILER STEAM THROTTLE HANDLE PLATE		
2	DCV-141-CROSS HEAD LINK	2	DCV-341-BOILER SAFETY VALVE BRACKET		
1	DCV-142-WATER PUMP CENTER LINK	1	DCV-342-WATER PUMP ECCENTRIC LEVER		
3	DCV-143-REVERSING GEAR MAIN SHAFT CRANK	2	DCV-343-BOILER SMOKE BOX DOOR HINGE BRACKET		
1	DCV-144-WATER PUMP MAIN SHAFT CRANK TYPE-1	2	DCV-344-BOILER WATER LEVEL INDICATOR FLANGE		
1	DCV-145-WATER PUMP MAIN SHAFT CRANK TYPE-2	1	DCV-346-WATER PUMP ECCENTRIC HOUSING		
2	DCV-146-ROCKER ARM TOP SPACER	1	DCV-347-BOILER AFT SUPPORT		
2	DCV-147-ROCKER ARM BOTTOM SPACER	1	DCV-348-BOILER SMOKE BOX FRONT DOOR LATCH		
2	DCV-148-ROCKER ARM BOTTOM WASHER	2	DCV-349-BOILER WATER LEVEL INDICATOR FLANGE BODY		
2	DCV-149A-REVERSING MAIN SHAFT CRANK BRONZE BUSH	1	DCV-349A-BOILER WATER LEVEL INDICATOR GLASS TUBE		
6	DCV-149B-VALVE LINK BRONZE BUSH-1	2	DCV-349B-BOILER WATER LEVEL INDICATOR SEAL		
2	DCV-149C-VALVE LINK BRONZE BUSH-2	1	DCV-350A-BOILER WATER LEVEL INDICATOR DRAIN BODY		
2	DCV-150-CON ROD LINK BRONZE BUSH	1	DCV-350B-BOILER WATER DRAIN BODY		
4	DCV-151A-COUPLING ROD BRONZE BUSH	1	DCV-351-BOILER WATER LEVEL INDICATOR DRAIN TAP		
2	DCV-151B-CON ROD BRONZE BUSH	1	DCV-352-BOILER WATER DRAIN TAP		
2	DCV-152A-COUPLING ROD BRONZE BUSH	2	DCV-353-BOILER PLUG TYPE-3(8.5)		
4	DCV-152B-COUPLING ROD WASHER	1	DCV-354-BOILER STEAM THROTTLE HANDLE		
2	DCV-152C-COUPLING ROD CENTER WASHER	4	DCV-355-BOILER WATER LEVEL INDICATOR GLAND		
1	DCV-153A-R-H VALVE GEAR MAIN PLATE	2	DCV-356-BOILER WATER LEVEL INDICATOR ELBOW		
1	DCV-153B-L-H VALVE GEAR MAIN PLATE	1	DCV-357-BOILER WATER LEVEL INDICATOR PLUG		
4	DCV-154A-VALVE GEAR SPACER BLOCK	2	DCV-358-BOILER PLUG M6		
4	DCV-154B-VALVE GEAR HEX SPACER BLOCK	2	DCV-360-BOILER PRESSURE METER GLAND		
2	DCV-155-VALVE GEAR HOLDING BLOCK	1	DCV-361-BOILER PRESSURE METER ELBOW		
4	DCV-156-VALVE GEAR PIVOT STUB	1	DCV-362-BOILER PRESSURE METER		
1	DCV-157-REVERSING GEAR MAIN SHAFT	1	DCV-363-BOILER SPRING RETAINER		
1	DCV-158-WATER PUMP MAIN SHAFT SPACER	1	DCV-364-BOILER SPINDLE REAITING SPRING		
2	DCV-201-CYLINDER	1	DCV-365-STOP NUT		
2	DCV-202-VALVE CHAMBER COVER	1	DCV-401-CABIN CLADDING PLATE		
2	DCV-203-VALVE CHAMBER	1	DCV-402-CABIN UPPER FLOOR		
2	DCV-204-VALVE CHAMBER DOME	1	DCV-403-CABIN LOWER FLOOR		
2	DCV-205-VALVE CHAMBER SEALING GLAND	1	DCV-404-CABIN FRONT PLATE		
2	DCV-205A-VALVE CHAMBER SEAL	1	DCV-405-CABIN UPPER FLOOR REVERSING STAND PLATE		
2	DCV-206-PISTON ROD	1	DCV-406-CABIN REAR PLATE		
2	DCV-206A-PISTON	1	DCV-407-CABIN REVERSING HANDLE		
2	DCV-207-PISTON RING	1	DCV-408-CABIN REVERSING HANDLE LINK BAR		
1	DCV-208-RH CROSS HEAD	1	DCV-409-CABIN REAR FRAME ANGLE		
4	DCV-208A-CROSSHEAD LOCATING DOWEL	1	DCV-410-CABIN FRONT FRAME ANGLE		
1	DCV-209-LH CROSS HEAD	2	DCV-411-CABIN WINDOW + SURROUND		
1	DCV-210-RH CROSS HEAD COVER	1	DCV-412-CABIN REVERSING STAND SUPPORT BLOCK		
1	DCV-211-LH CROSS HEAD COVER	1	DCV-413-CABIN UPPER FLOOR MOUNTING BLOCK		

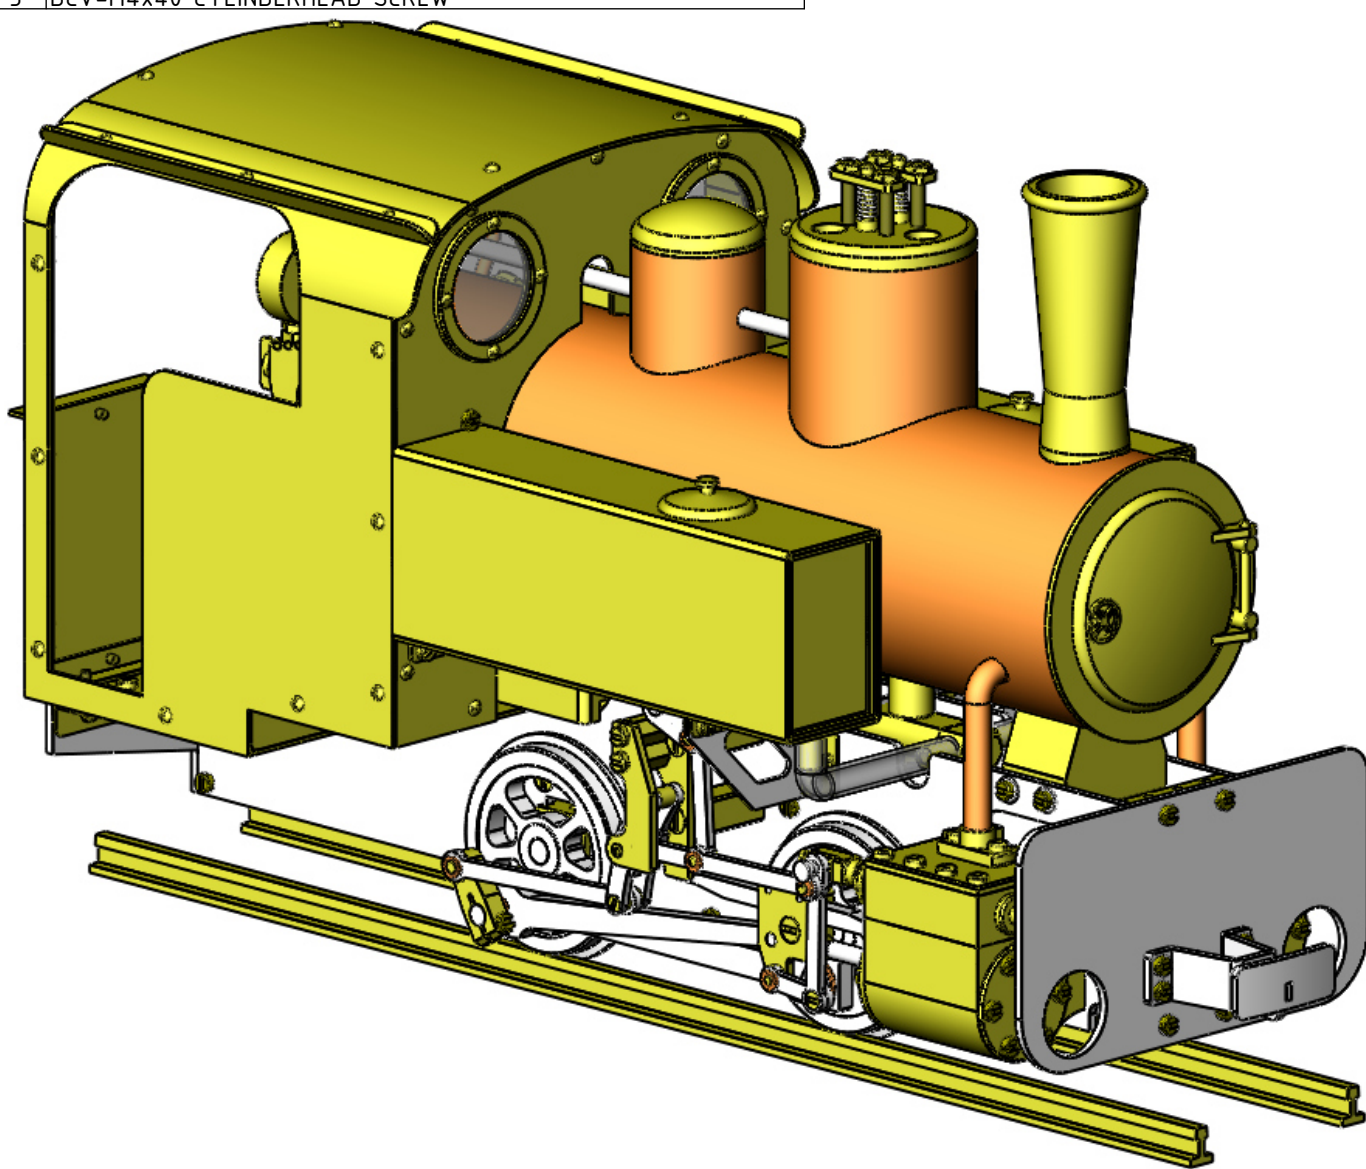

NOTES: FOUND RIGINAL DRAWINGS ON THE INTERNET. THE ORIGINAL DESIGN WAS BY J.P.DUVAL. DATED 07/2002. MINIATURES-MECANIKES-MODELES, 30580 FONS/LUSSAN

TITLE		DRAWING CONTENTS		PROJECT No 07E-02-00		PROJECTION		MODEL SCALE: 1:13.5/45mm GAUGE	
MODEL STEAM LOCOMOTIVE		ISOMETRIC VIEW AND BILL OF		JDW DRAUGHTING SERVICES		DATE JUNE 2010		DWG SCALE: 1:1 @A3 OR AS SHOWN	
020T DECAUVILLE		MATERIALS		J.A.M. DE WAAL. 12 BRIGHTWELL STREET PAPA KURA 2110. NEW ZEALAND. PHONE: 0064 09 2988815. MOB: 0211791000 E-MAIL: dewaal@xtra.co.nz.		SHEET: 02 OF 14		Copyright © J.A.M. DE WAAL PAPA KURA NZ	
						A3		No: 07E-02-00-SHT02	

DRAWINGS ARE FOR PERSONAL USE ONLY NOT FOR COMMERCIAL PURPOSES